


# AIRLINE DELUXE

*consists of*


- A. HOOK
- B. HIGHTENSION ARAMID CABLE WITH LOOP
- C. NOSE CONE
- D. CENTER STRINGER
- E. AIRLINE FIN BOX

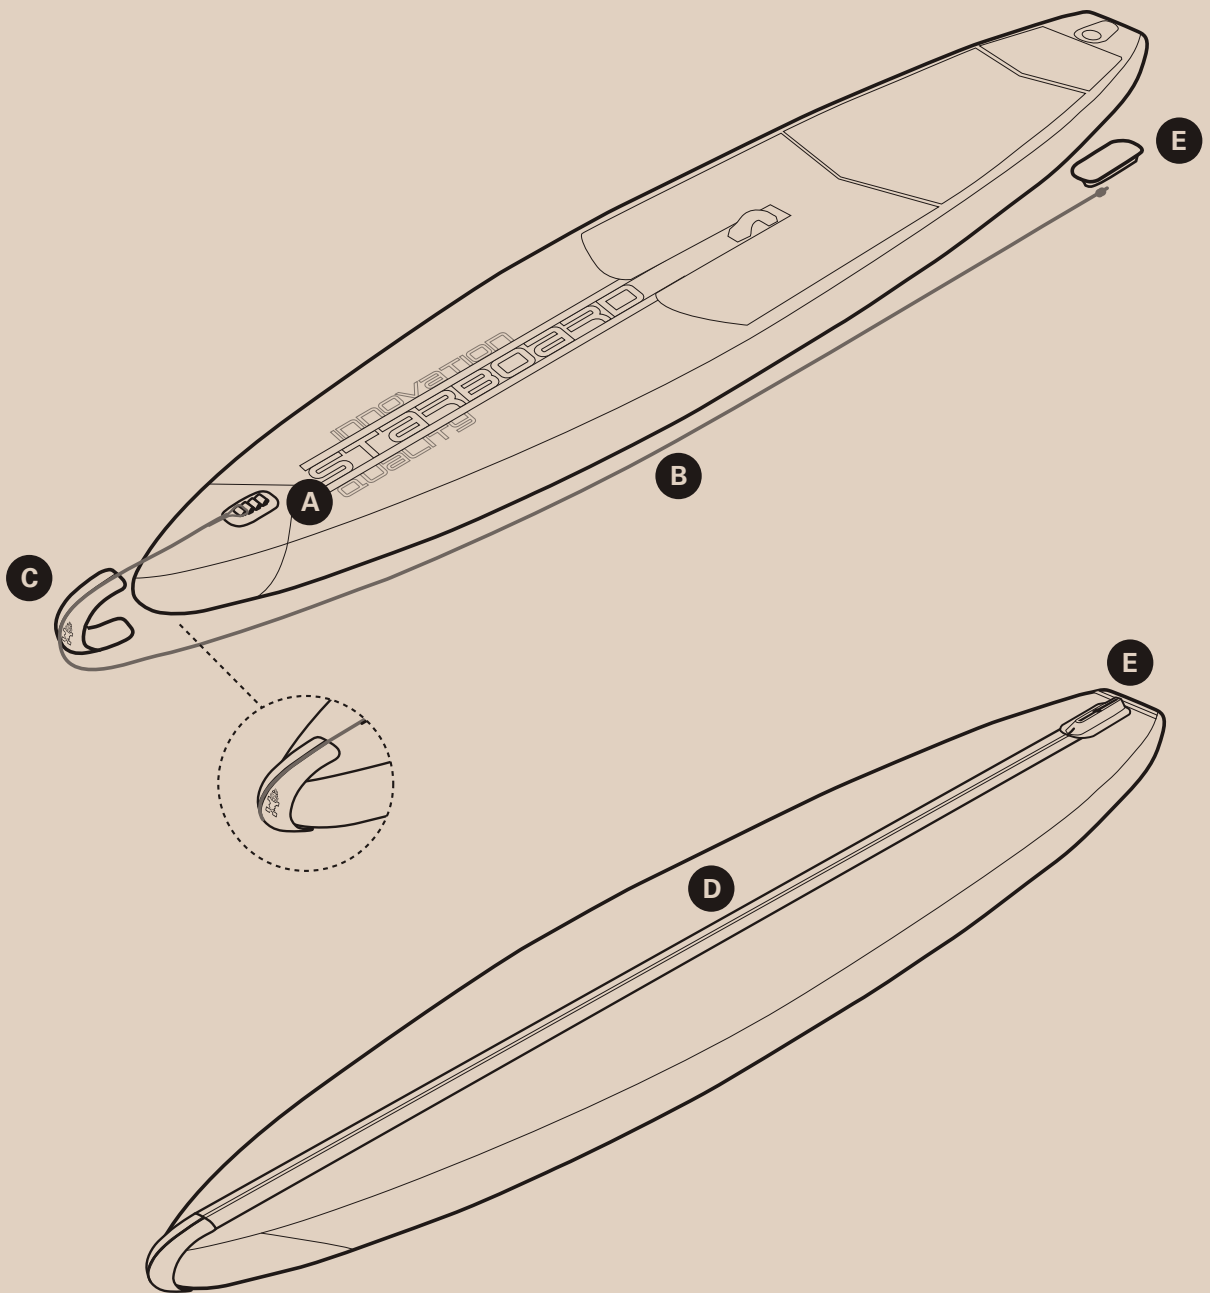


# AIRLINE DELUXE

## How to install




- 1 Before inflating the board, add the Nose Cone onto the nose of the board with the Tiki Logo standing up.

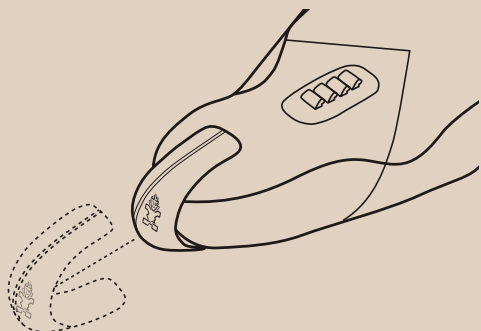

- 2 Pass the cable onto the groove line of the Nose Cone. Slightly fold the nose to allow the loop to lock on the first slot of the hook. Make sure the loop is properly set in the hook before inflating.

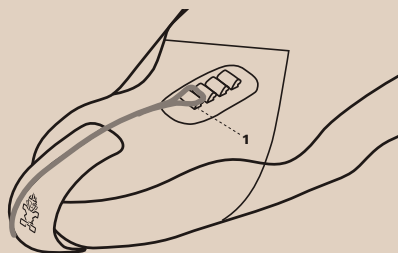


- 3 Inflate the board carefully to make sure the loop and the Nose Cone stay in the straight position. Do not exceed 18 PSI. The cable should be in full tension once inflated.

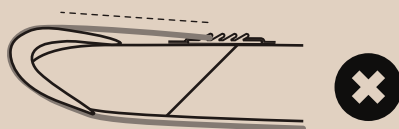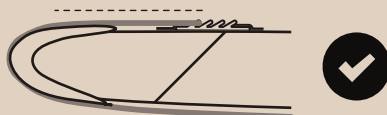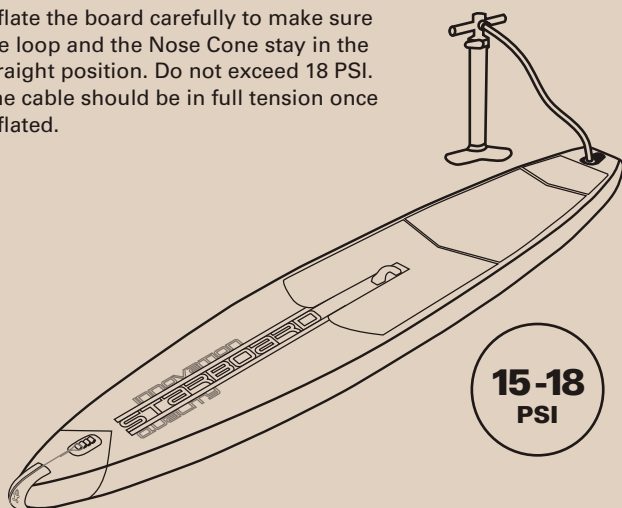


## To adjust the Airline tension

- 1 Deflate the board by pushing the valve button in and turn clockwise to lock it in down position.

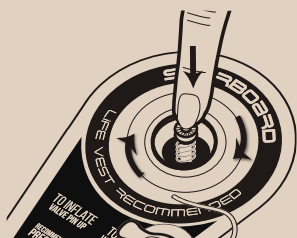

- 2 Fold the nose of the board with the Nose Cone attached to lock the loop on the next hook slot. This will reduce the length of the cable and create more tension.

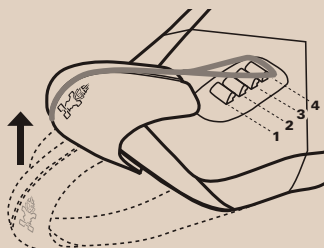

- 3 Inflate the board carefully while making sure the loop and the Nose Cone stay in the straight position.

